



The wetness sensor indicates whether precipitation is falling by measuring resistance across the sensor surface. The wetness sensor should be visually checked at least once a month. If there is a buildup of dust, bird excrement, or other debris on the sensor surface, clean the sensor surface (**very gently and very carefully**) with a soft clean rag and clean water. Do not use any abrasive cleaners on the sensor surface.